
JOURNEY TRIO



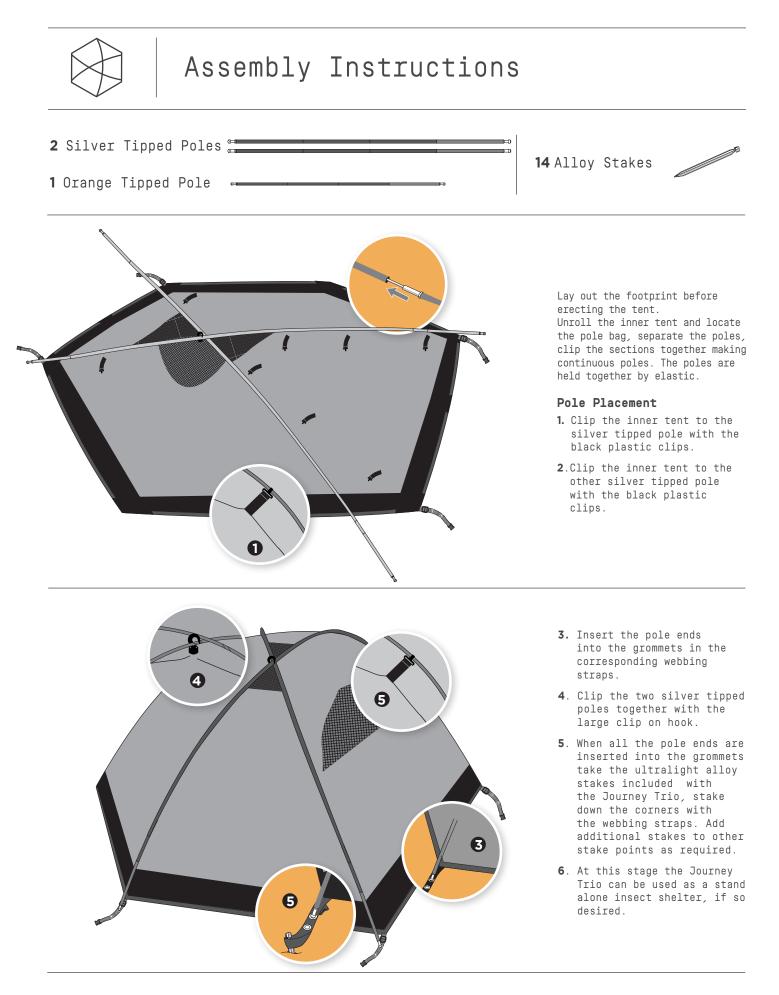

JOURNEY TRIO



Assembly Instructions

- Take out the fly (Outer Tent) unfold and lay out. Drape the fly over the main body matching up the door and foot area, connect the two with the velcro loops.
- 8. When the inner tent is connected with the fly, click all the side release buckles together.
- **9**. Insert the orange tipped pole into the orange trimmed edging
- 10. To gain access unzip the fly and inner tent zips.
- **11.** When happy with the set-up, further stabilisation is achieved by pegging out the guy lines. This is essential in windy conditions.



WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84. THE FABRIC MAY BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE TENT FABRIC MAY RENDER THE FLAME-RESISTANT PROPERTIES INEFFECTIVE.

THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF ISO6941 / (EN5912).

Snugpak[®] products are exclusively distributed in North & South America by: PRDFDRCE EQUIPMENT, INC. 3230 Executive Way - Miramar, FL 33025 Ph: 305.436.7984 / 800.259.5962 WWW.PRDFDRCEEQUIPMENT.COM

www.SNUGPAKUSA.com